



102079 - New Look Bus Lighting Kit

THE LIGHTING KIT REQUIRES A 12V DC POWER SUPPLY (NOT INCLUDED).

THE LIGHTS CAN BE TURNED ON AND OFF BY WAVING THE MAGNETIC WAND ALONG THE DOOR SIDE OF THE BUS ADJACENT TO THE REED SWITCH ON THE ④ MAIN CIRCUIT BOARD.

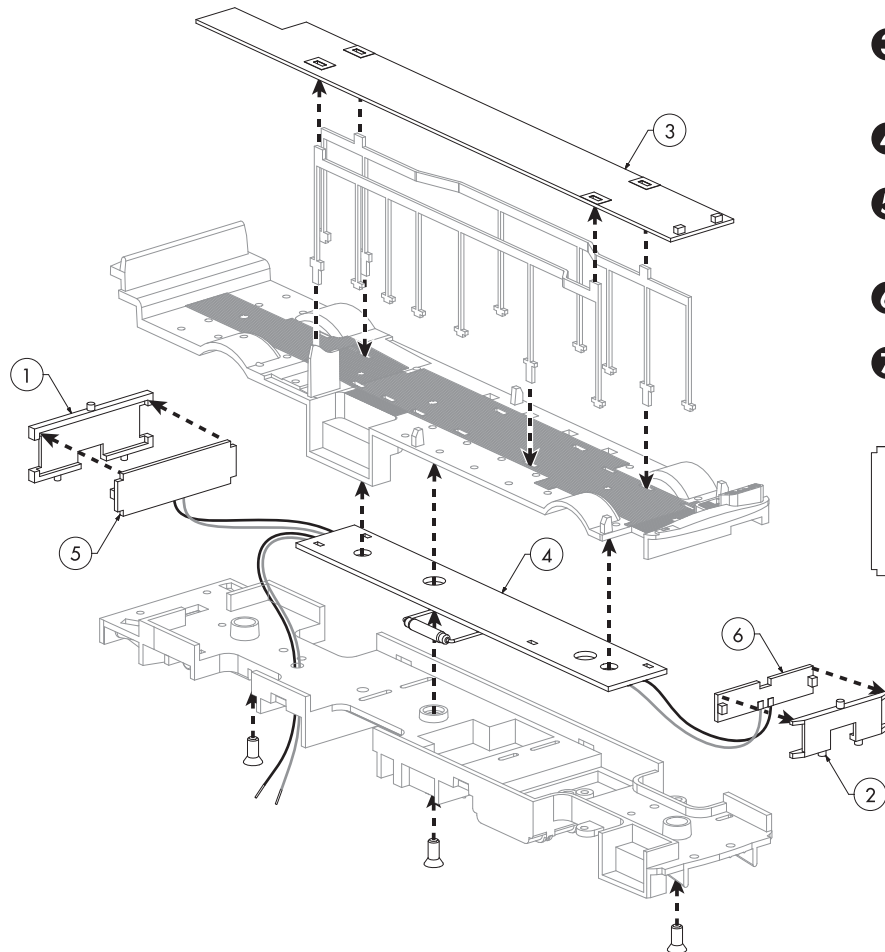

- ① REMOVE SHELL, UNSCREW/REMOVE UNDERFRAME FROM FLOOR.
- ② SOLDER ⑤ ⑥ END LIGHTING BOARDS TO ④ MAIN CIRCUIT BOARD USING PROVIDED WIRES.
- ③ DE-SOLDER STANCHIONS FROM DUMMY CIRCUIT BOARD UNDER FLOOR AND REMOVE (SOLDER JOINTS MARKED LED+ AND LED-).
- ④ SOLDER ④ NEW CIRCUIT BOARD TO STANCHIONS UNDER FLOOR.
- ⑤ DE-SOLDER DUMMY LIGHTING BOARD FROM TOP OF STANCHIONS AND REMOVE (SOLDER JOINTS MARKED LED+ AND LED-).
- ⑥ SOLDER ③ NEW LIGHTING BOARD TO TOP OF STANCHIONS.
- ⑦ RE-ASSEMBLE BUS.

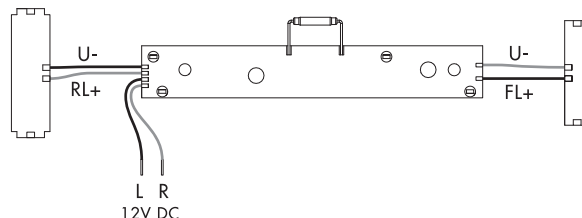

6	701-PCB04	1
5	701-PCB03	1
4	701-PCB02	1
3	701-PCB01	1
2	701-04-11	1
1	701-04-10	1
PC NO	PART NAME	QTY